

ergotron[®]

moving you forward

YES30 Basic Laptop & Chromebook Charging Cart

- Adjustable rows & dividers: Holds any device: 30 Chromebooks, MacBooks, Surface Pros and tablets
- Lightweight design: Locking casters let you easily move from room to room
- Secure storage: Multi-feature locking system with removable door keeps devices secure
- Budget-friendly: Durable, compact cart at a competitive price
- Fully assembled: Just plug it in to start charging—saving you time and hassle
- Lifetime warranty: Adapts to new devices and lasts for years for the best ROI



COMPACT DESIGN FITS ALL YOUR DEVICES—
AND YOUR BUDGET

Say “yes” to a compact charging cart that charges all your devices from Chromebooks to tablets in a space-saving footprint—all while staying within your budget. The YES30 Basic fits screens up to 13”—and some up to 14” or larger—thanks to adjustable Pop-N-Go Bays. The heavy-duty steel construction keeps devices secure with its durable design. Charge safely with one cord and a built-in timer system that alternates power through the cart to manage the power draw. The compact frame and locking casters let you easily move your devices from room to room. Best yet, it ships fully assembled, so it’s ready to go out of the box.

YES30 Basic Laptop & Chromebook Charging Cart



ADJUSTING THE LIFT-N-SET SHELVES IS SIMPLE AND INTUITIVE. POSITION THEM AT ANY HEIGHT IN 2/3" (1.6 CM) INCREMENTS



POP-N-GO BAYS ARE SO EASY TO ADJUST; SIMPLY POP THEM OUT OF PLACE AND POSITION THEM AT ANY WIDTH IN 0.3" (0.7 CM) INCREMENTS




MIX AND MATCH DEVICES—THE INTERIOR IS YOURS TO CONFIGURE



DEVICES ARE SECURE WITH A 2-POINT LOCKING SYSTEM



POSITION SHELVES AT ANY HEIGHT IN 2/3" (1.6 CM) INCREMENTS, AND STORE YOUR DEVICES IN LANDSCAPE OR PORTRAIT ORIENTATION

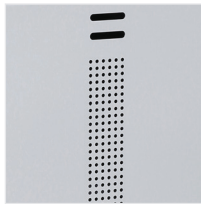

DOORS, SIDE PANELS AND INTERIOR PANELS ARE VENTILATED SO THAT DEVICES STAY COOL



THE COMFORT EDGE TOP SURFACE HAS A LIP TO PREVENT ITEMS FROM ROLLING OFF



THE POWER OUTLETS FACE STRAIGHT BACK SO THEY'RE EASY TO REACH. A SPACIOUS IT AREA IN BACK KEEPS CABLES AND POWER ADAPTERS PROTECTED AND SECURE



HEAVY-DUTY 4" (10 CM) LOCKING CASTERS MOVE SMOOTHLY OVER ROUGH SURFACES. THE YES BASIC IS EASY TO STEER THANKS TO TWO DIRECTIONAL LOCK CASTERS AND TWO 5" (13 CM) WIDE HANDLE GRIPS

Compact design maneuvers easily through crowded hallways and into tight spaces with 4" (10 cm) dual-wheel rubber casters (2 directional-lock for easy steering, 2 total-lock to keep it in place) and a wide ergonomic handle



Part # (color)	YES30-LTPCHR-3 (SG/HK/MY) YES30-LTPCHR-4 (AU/NZ) YES30-LTPCHR-5 (CN) (grey & white)
Compatible Devices	MacBooks, Chromebook, Surface Pros with iPads, eReaders, handhelds
Typical Screen Size	≤ 14" See website for details
Number of Devices	30
Slot Size & Divider Widths	Maximum device width/height: 14.25" x 10" (36,2 x 25,4 cm) including case and cord. Adjustable shelves install at any height.
Certifications	IEC60950 Safety Standards
Security	Keyed lock engages a two-point locking system for security; Additional padlock brackets position your padlock to block access for extra security
Power System	Simple power management system safely charges devices with a single cord to the wall; built-in timer system alternates power.
Weight Capacity	60 lbs (27,3 kg) per shelf (3 shelves total in cart). Per device maximum weight of 6 lbs (2,7 kg) assumes 10 devices per shelf in a cart configured to hold 30 devices in total
Product Dimensions	23.17" x 23.38" x 41.5" (58,85 x 59,38 x 105 cm)
Shipping Dimensions	28" x 27.8" x 49.3" (71 x 71 x 125 cm)
Shipping Weight	200 lbs (91 kg)
Warranty	Limited lifetime for the frame; 5 years for other mechanical components; 3 years for electrical components; 1 year for cables

Download additional resources at ergotron.com.

For more information:

USA & Canada: 800.888.8458 / +1.651.681.7600 / insidesales@ergotron.com

EMEA: +31.33.45.45.600 / info.eu@ergotron.com

APAC: apaccustomerservice@ergotron.com

LATAM: +1.800.681.1820 / info.latam@ergotron.com

Custom: custom@ergotron.com

© Ergotron, Inc. 10.06.2020

Literature made in the U.S.A.

Content subject to change.

Ergotron devices are not intended to cure, treat, mitigate or prevent any disease.

Patent information available at www.ergotron.com/patents.

